


THANK YOU for using the
Hiker's Camera Belt!

Please read these


QUICK, EASY INSTRUCTIONS TO GET STARTED FAST!

STEP 1: TAKE OFF YOUR CAMERA OR BINOCULARS.


2. Buckle on and adjust the Hiker's Camera Belt. **Position the big buckle at your SIDE**, with the tie-down strap running across your front.

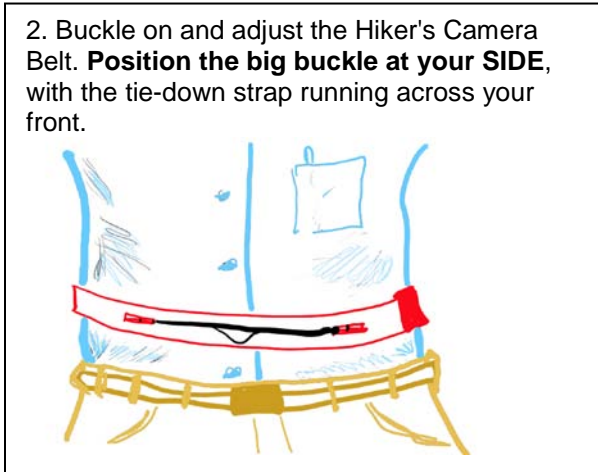


3. **UNBUCKLE** one end of the tie-down strap from the main belt. **Let the end hang down.**

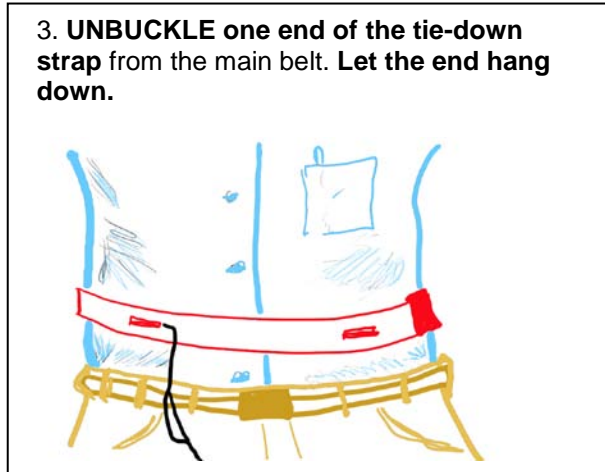

4. Put on your camera or binoculars. Adjust the Hiker's Camera Belt up or down until it is right behind your gear and the small buckles are centered.

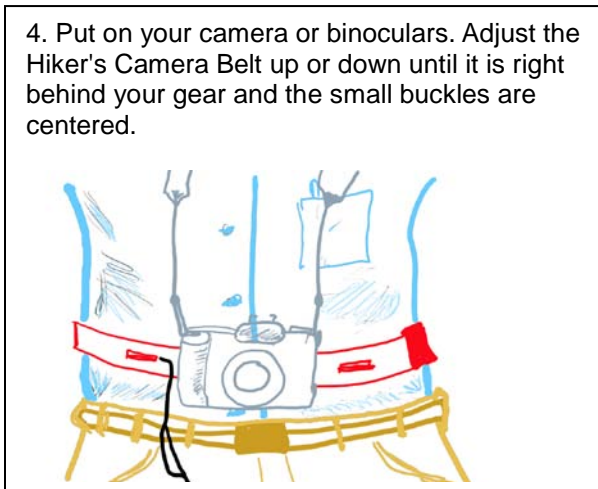

5. **Pass the loose end of the tie-down strap OVER EVERYTHING!** Over your **CAMERA** and **OVER** your camera straps. **Buckle it.** Adjust so the elastic is stretched a bit, but a loop still remains in the non-stretch strap.

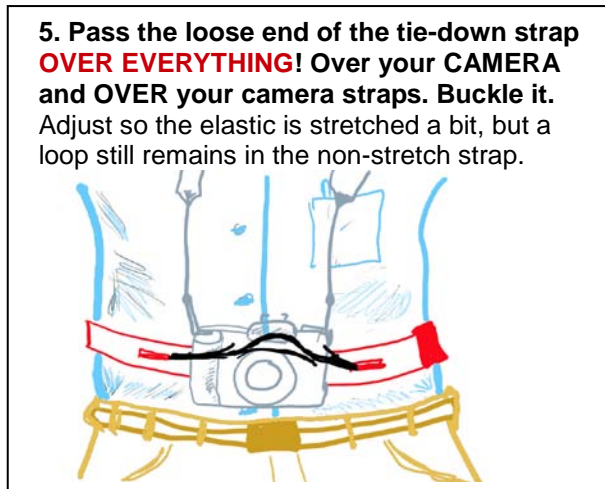

TO INSTANTLY USE your gear -- UNBUCKLE!

That's right! Just unbuckle one end of the tie-down strap.

Don't futz with trying to s-t-r-e-t-c-h the tie-down off.

Just UNBUCKLE! No fuss - no muss - It's fast! It's easy!

(And it buckles back on just as quick when you are ready to move on.)

For detailed, illustrated step-by-step instructions, including information on stabilizing long heavy lenses, please go to www.hikerscamerabelt.com/photos.

I hope you get many useful years from your Hiker's Camera Belt. If you have any questions, suggestions, or problems please email me at: aheld@ivmont.com.